

REPLACING PIN BLOCK INSTRUCTIONS


Z2 NO-TEAR-TAGGER™


Equipment required: Star head screwdriver
Additional spare pin blocks can be ordered from your applicator retailer or supplier.

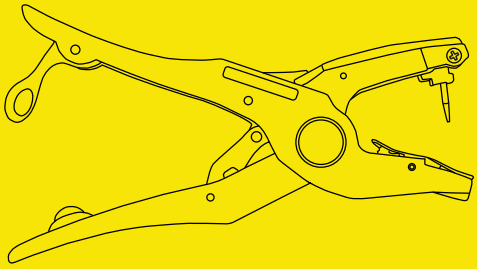


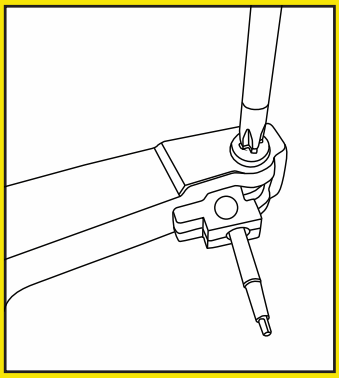



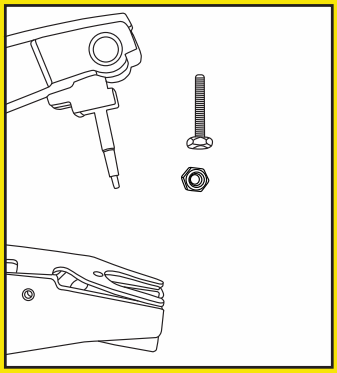


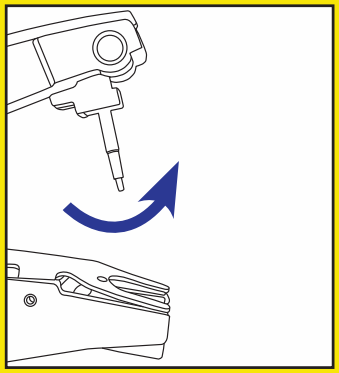


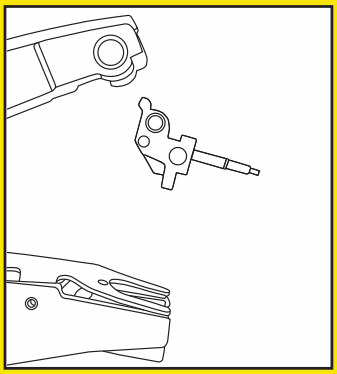


1. Unscrew the pin block being replaced from the applicator.

2. Set the pin block to the side/clear of your working area. Keep the screw and bolt as they are needed for the new pin block.

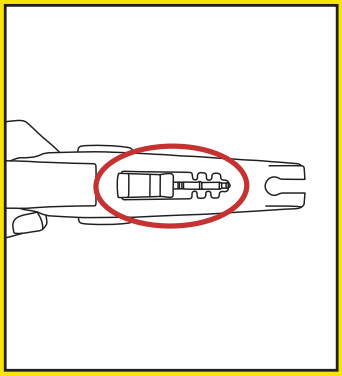


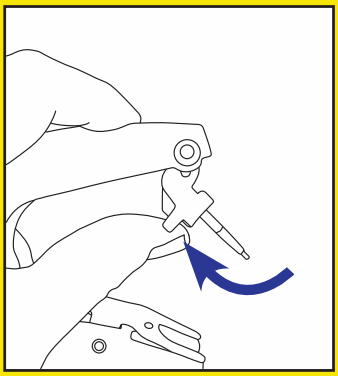


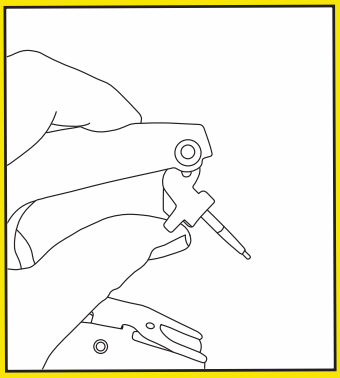


3. Locate and remove the spare/replacement pin block from within the handle/jaw of the applicator.

4. Position the new pin block into the applicator jaw as shown above. Tighten in place with the screw and bolt.

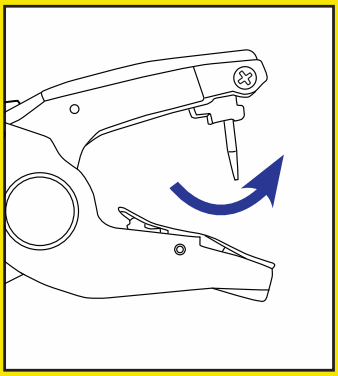

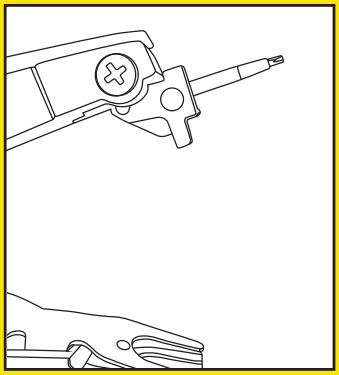

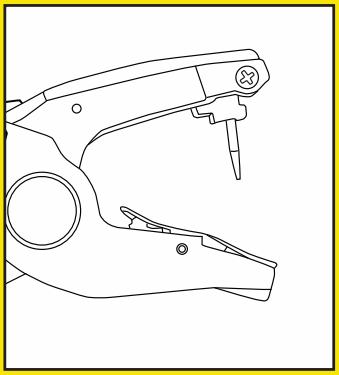

5. Test the movement of the assembled pin block. When you close the applicator handles the pin block should spring back straight away. If this does not happen, disassemble, and restart assembly from step 1 until the movement of the pin block is consistent.

© 2025 Datamars Ltd